

Thank you for purchasing the NLZ E electric micromotor.  
Please read this supplement carefully before use.

This NLZ E product is designed specifically for integration in DCI Edge delivery systems, allowing for easy installation and seamless incorporation into your workflow.



As you refer to the NSK Operation Manual for the NLZ E, please bear in mind that illustrations which include the touchpad and display interface will have a different appearance than your product. The symbols for each key on the touchpad and the information displayed on the LCD screen still remain the same as they appear in the manual.

As this product comes pre-installed or prepared for retrofitting to existing DCI Edge delivery systems, the below mentioned descriptions in the NLZ E Operation Manual are not applicable for use.

- 2-1 : List of components
- 2-2 (page8) : Part Names of Control Unit and Main Unit
- 3-1 : Installing the Main Unit and the Control Unit
- 3-2 : Connecting the Tubing
- 3-3 : Connecting the Motor Cord
- 3-4 : Connecting the AC Adapter
- 3-5 : Connecting the AC Power Cord
- 3-8-1 : Changing the setting for various functions (“Section Power Switch”)
- 5-4-1 : Cleaning, Disinfecting (Control unit, motor cord)  
“Section Power Switch”
- 8-1 : Specifications (Control unit, AC Adaptor) “Section AC adaptor”
- 9-2 : Spare Parts List (Below 4 items in table are not applicable)
  - NLAC(120V) – Y141133
  - AC Power cord – U438550
  - NLZ U Bracket – Z1322
  - NLZ U – U114002
- 9-3 : Optional Parts List (Below 2 items in table are not applicable)
  - NLZ STAY – Z1321
  - NLZ MOUNTING PLATE – Z1323

