




Reprocessing Instructions in accordance with ISO17664

Prophy Mate / Prophy Mate neo

Preparation

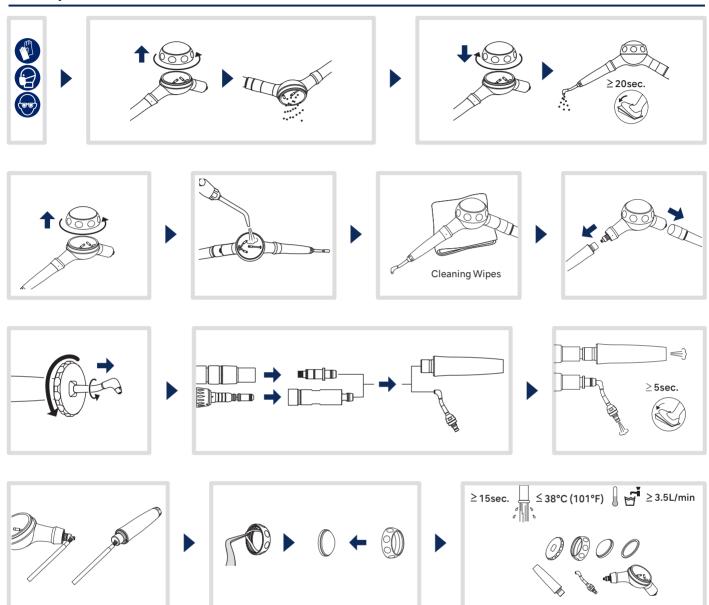

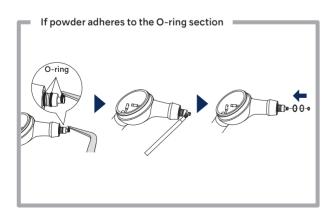

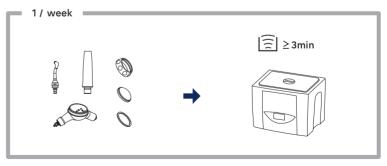

It is recommended to cover the ultrasonic bath during operation.


- ⚠ · After cleaning, if moisture is present, wipe off with a dry cloth or blow it off with compressed air until there is no moisture in the in the interior and exterior.

 · When blowing off with compressed air, cover the product with cloth to prevent scattering of water.


 · Use a state-sanctioned disinfectant with proven bactericidal, fungicidal, and virucidal properties.

2 Cleaning and Drying

Manual

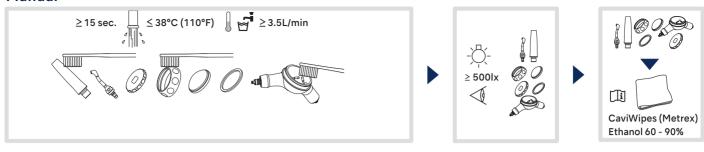


Automated

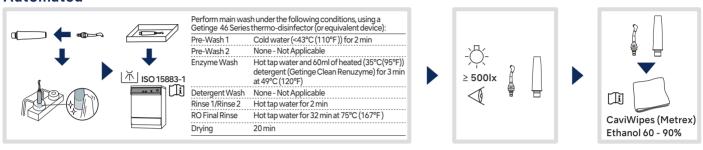

3 Lubrication



4 Packaging, Sterilizing, and Drying

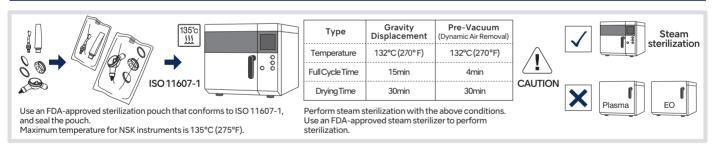

5 Storage



NSK America Corp.