

FG Standard ISO 314




31 • FG

Ø 1.60 mm

Use FG Standard Burs in high speed handpieces with head sizes S and T. Also for use in low speed friction grip handpieces

FG Short ISO 313

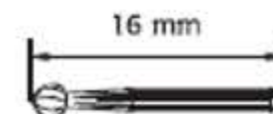


33 • FG short

Ø 1.60 mm

Use FG Short Burs in high speed handpieces with head size M handpieces.

RA Right Angle ISO 204

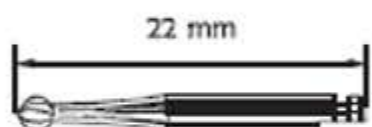

21 • RA

Ø 2.35 mm

Use RA Latch Burs in all low speed handpieces with CA chucks.

HP Handpiece Standard ISO 104




11 • HP

Ø 2.35 mm

Use straight handpiece Burs in all low speed HP handpieces and laboratory micromotors.

HP Surgical ISO 105

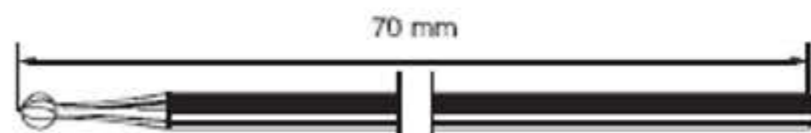

17 • Handpiece extra-long

Ø 2.35 mm

Use HP Surgical Burs in all micro surgery handpieces.

CAUTION

Due to the high torque levels of 1:5 increasing low speed handpieces, the use of long shank FG burs in these handpieces may result in bending of the bur shank. This effect can be dangerous to the patient. NSK suggests that Clinicians avoid using long shank FG burs in these handpieces.